


The connection for wiring the EPS contactor is as below.

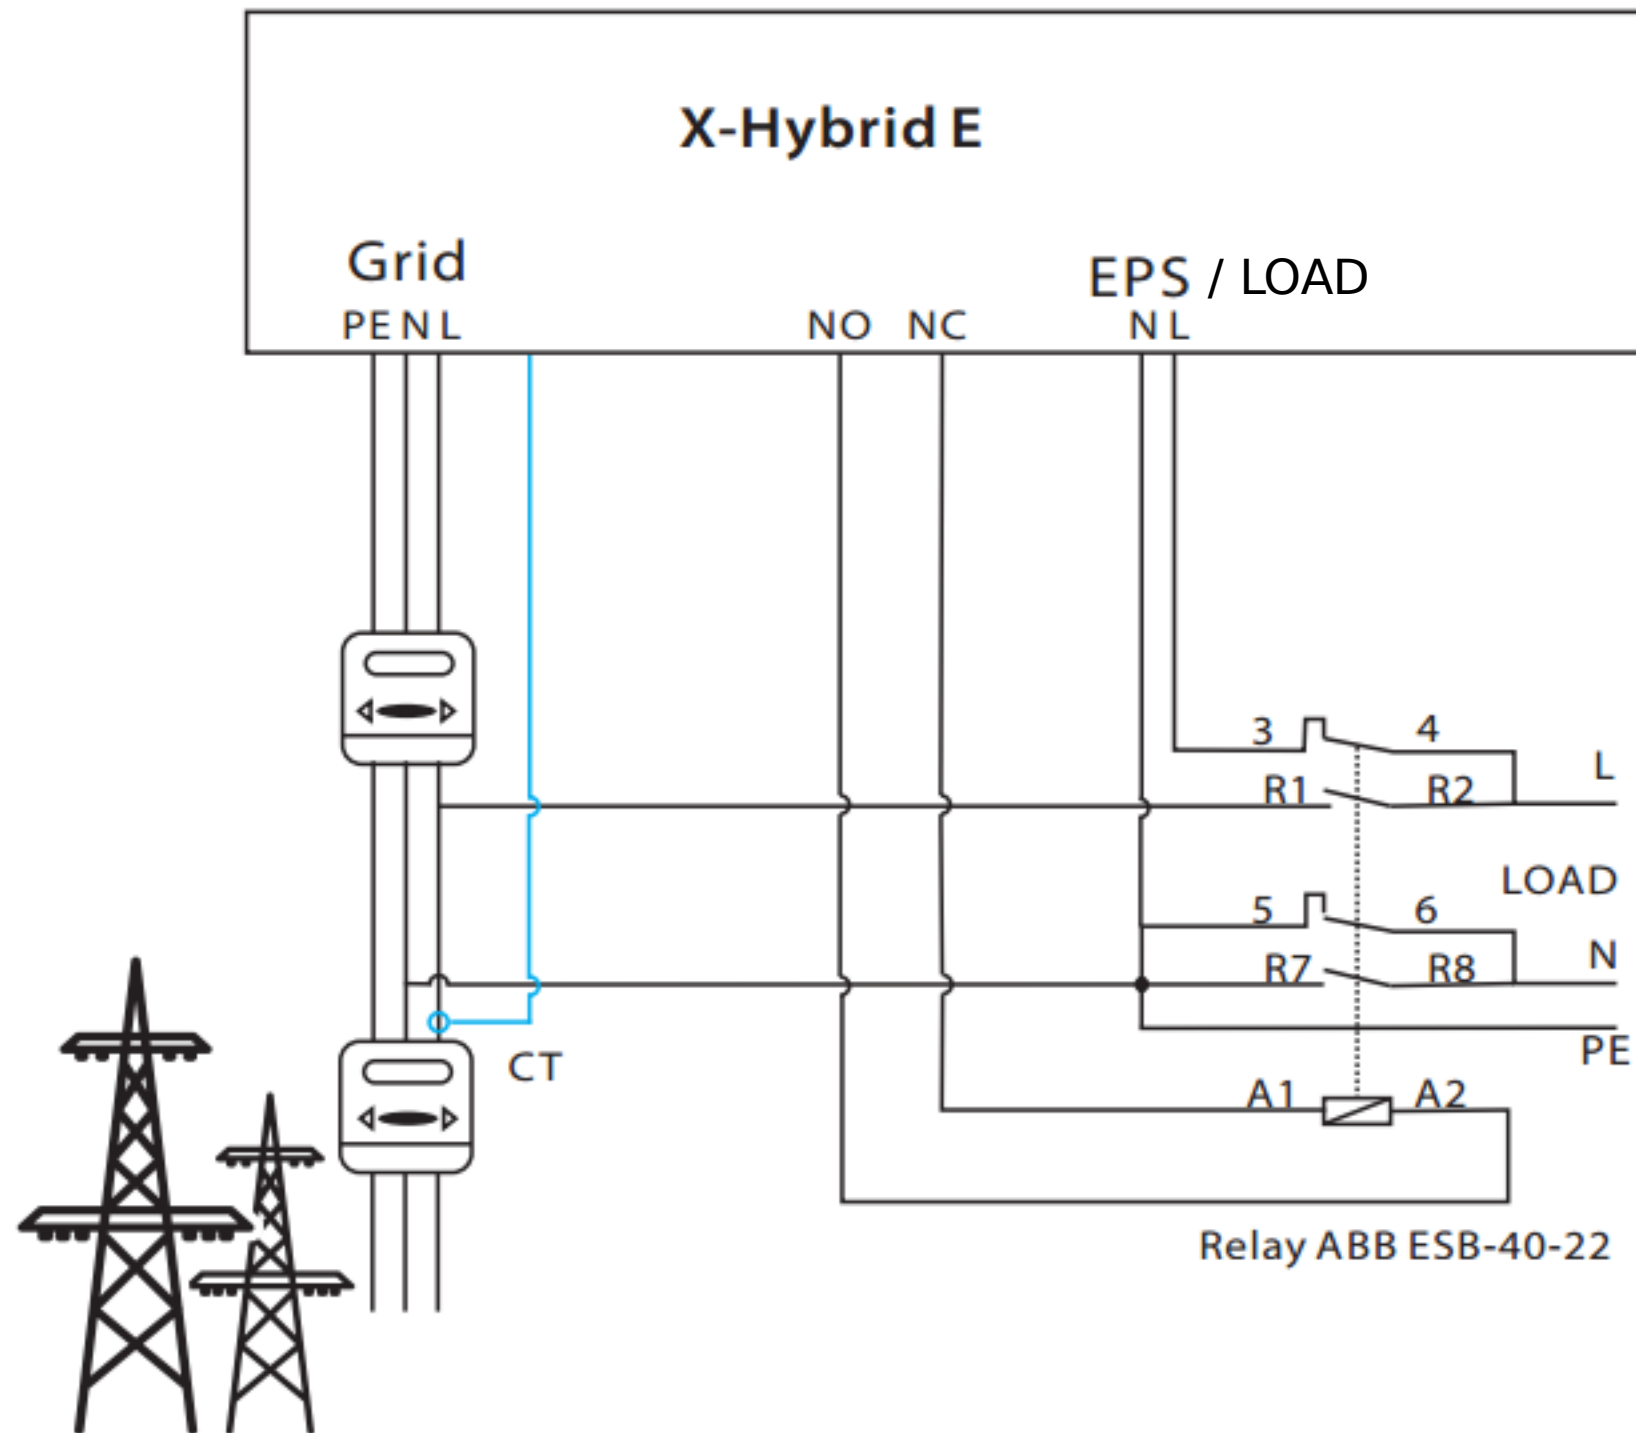

WARNING!

Usually the capacitive load and inductive load will cause large current. Please consider the inrush current of the load when connect the EPS load.