 
#### solaredge

# SolarEdge Home Hub Inverter - Single Phase

**Quick Installation Guide** For Europe

## What's in the Package





SolarEdge Home Network Antenna

#### 4 WARNING!

This symbol denotes a hazard. It calls attention to a procedure that if not correctly performed or adhered to could result in injury or loss of life. Do not proceed beyond a warning note until the indicated conditions are fully understood and met.

CAUTION! Denotes a hazard. It calls attention to a procedure that, if not correctly performed or adhered to, could result in damage or destruction of the product. Do not proceed beyond a caution sign until the indicated conditions are fully understood and met.

#### Mounting



WARNING! To avoid danger, read the HANDLING AND SAFETY INSTRUCTIONS provided with this product, or refer to: https://www.solaredge.com/sites/default/files/se\_handling\_and\_saf ety\_instructions.pdf

 
SolarEdge Technologies GmbH, Werner-Eckert-Str. 6, 81829 Munich, Germany



Before installation, read the datasheet provided with this product, or refer to: https://knowledge-center.solaredge.com/sites/kc/files/se home-hub-single-phase-inverter-datasheet-eu.pdf



## **Tools and Materials**



solaredge.com

Subject to change without notice. © SolarEdge Technologies, Ltd.

All rights reserved. March 2023.









Open-end 10mm Torque wrench torque wrench with 4 mm Allen bit


Small Flat-Blade Phillips/Flat-Blade (2mm) Screwdriver screwdriver set

Mounting screws and wall plugs - max M10

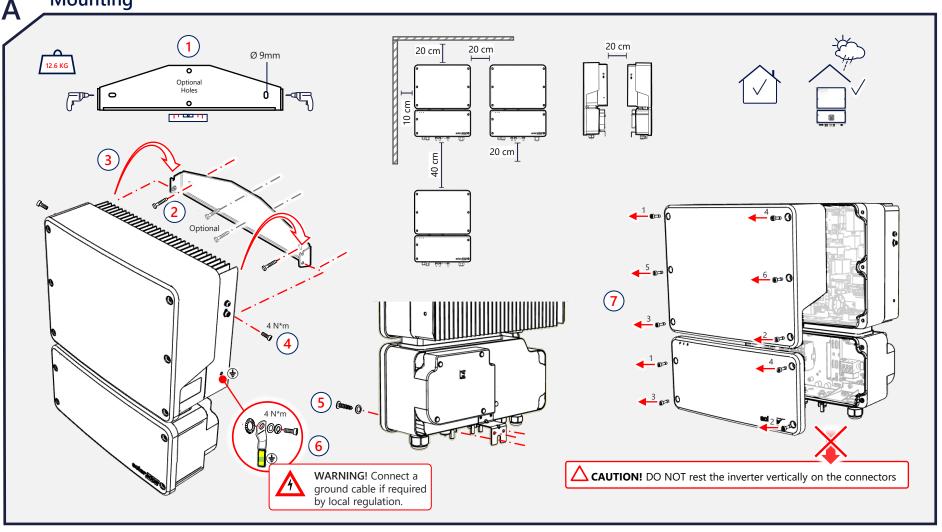


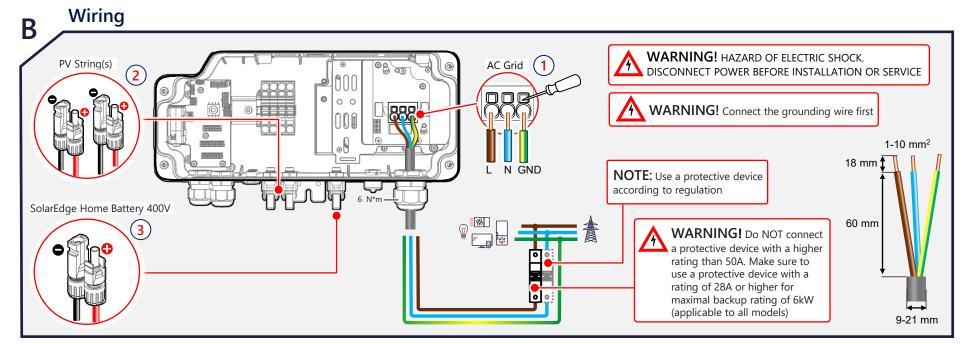


IMPORTANT! The connection to units and accessories shown here is for reference only. For detailed information, refer to the specific product guide.

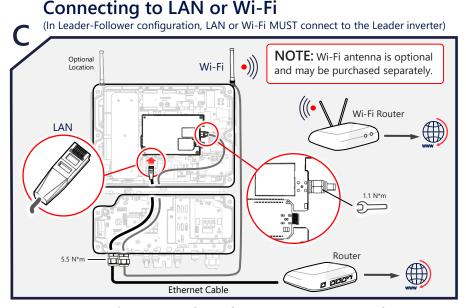


#### Connecting to SolarEdge Home Network

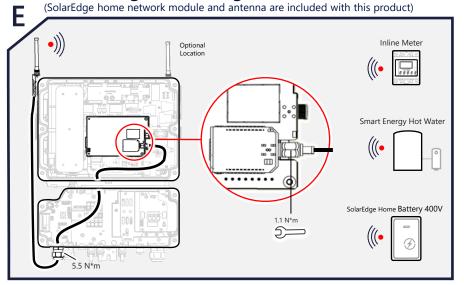


# G Connecting Multiple Inverters

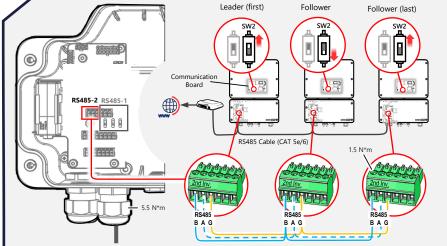

### Commissioning the Inverter

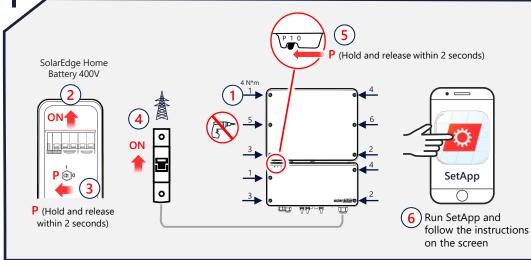


#### Connecting to SolarEdge Home Battery 400V

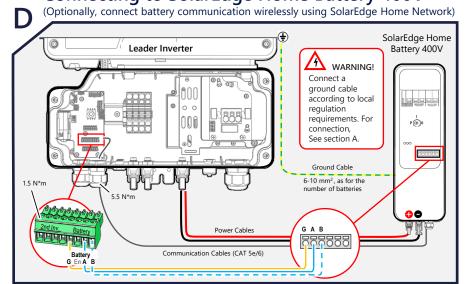

#### **Connecting to Backup Interface**

#### F Backup Interface 000 0 0 0 0 $\odot$ 日日 000 R 0 15 N\*n GAB 12-12+ A REPORT OF 17171 Communication Cables (CAT 5e/6)

Connecting to Meter and External RSD Switch

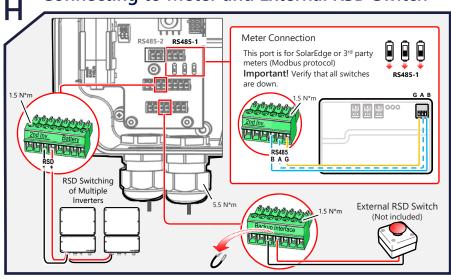

LED Indications

