## WIFI Communication Set Up

Please ensure the following:

- Inverter system is fully installed and powered on.
- Using either a computer / tablet or Smart phone follow the instructions

#### Step 1

Open your wireless network search option and connect to AP\_000000\*\*\*\*

🥱 🜒 🏭 83% 💷 Mon 15:	28 卷毛
Wi-Fi: Looking for Networks	
Turn Wi-Fi Off	
✓ AP_1604960801	((i·
360WiFi-A78C	🔒 🤶 🔒
AP_Coolpad5951	
eaken	
Hall	
mfw	
mkw	
TP-LINK25	
TP-LINK_3662C2	
Trannergy-PD	
Trannergy-SVR	
Xiaomi_jack	
Join Other Network	
Create Network	
Open Network Preferences	



# Open your web browser and type 10.10.100.254 into the address bar.

#### Step 3

Once the log in window appears Enter 'admin' for both Name & Password.

To view this page, you must log in to area "IGEN- WIFI" on 10.10.100.254:80. Your password will be sent unencrypted.	
Name:	
Password:	
Remember this password in my keychain	
Cancel Log in	

Windows Security	
The server 10.10	0.100.254 at IGEN-WIFI requires a username and password.
Warning: This s sent in an insec connection).	erver is requesting that your username and password be ure manner (basic authentication without a secure
	admin       •••••       Remember my credentials
	OK Cancel

## WIFI Communication Set Up



Step 5

## Click on Wizard in the left hand panel to begin set up. Click 'Start'



### Select 'Wireless Connection'



#### Step 6

From the list of available networks, select the router which you wish to connect with.

BSSID         BSSI Channel           00:37:b7:ab:75:21         65%         1           70:40:a0:00:cd:01         14%         1           e0:19:10:40:c61:c8         15%         4           48:ee:00:62:de:a4         0%         4           42:e9:1d1:f1:07:dc         15%         6           70:40:a5:04:cc:39         34%         6           00:e9:1d1:f1:07:dc         24%         6           42:f2:01:3a:f2:96         5%         6           b0:c5:54:bd:60:e3         0%         11           12:62:2c:31:23:be         0%         11           00:62:21:31:23:be         0%         11           reselected WIFI network is lower than 15%, the table, please select other available network or tween the device and router.
BSSID         PSSI Chappel           00:37:b7:ab:75:21         65%         1           70:40:a5:00:cd:01         44%         1           e0:19:1d:4c:61:c8         15%         4           48:ee:0c:62:de:a4         0%         4           42:e9:dd:ff:d7:dc         15%         6           00:e9:dd:ff:d7:dc         24%         6           00:e9:dd:ff:d7:dc         24%         6           b0:c5:54:bd:60:e3         0%         11           12:62:2c:31:23:be         0%         11           70:56:81:ce:28:05         15%         11           00:62:2c:31:23:be         0%         11           reselected WiFi network is lower than 15%, the table, please select other available network or tween the device and router.
00:37:b7:ab:75:21 65% 1 10:37:b7:ab:75:21 65% 1 e0:19:1d:4c:61:c8 15% 4 48:ee:0c:62:de:a4 0% 4 48:ee:0c:62:de:a4 0% 4 42:e9:dd:ff:d7:dc 15% 6 7c:4c:a5:d4:cc:39 34% 6 00:e9:dd:ff:d7:dc 24% 6 42:f2:01:3a:f2:96 5% 6 b0:c5:54:bd:6c:e3 0% 11 12:62:2c:31:23:be 0% 11 70:56:81:ce:28:05 15% 11 00:62:2c:31:23:be 0% 11 re selected WiFi network is lower than 15%, the table, please select other available network or tween the device and router.
control 12010000000000000000000000000000000000
e0:19:1d:4c:61:c8         15%         4           48:ee:0c:62:de:a4         0%         4           48:ee:0c:62:de:a4         0%         4           42:e9:dd:ff:d7:dc         15%         6           7c:4c:a5:d4:cc:39         34%         6           00:e9:dd:ff:d7:dc         24%         6           42:f2:01:3a:f2:96         5%         6           b0:c5:54:bd:6c:e3         0%         11           12:62:2c:31:23:be         0%         11           00:62:dd:12:3be         0%         11           ro:56:81:ce:28:05         15%         11           00:c6:2c:31:23:be         0%         11           reselected WIFi network is lower than 15%, the table, please select other available network or tween the device and router.
48:ee:0c:62:de:a4       0%       4         42:e9:dd:ff:d7:dc       15%       6         7c:4c:a5:d4:cc:39       34%       6         00:e9:dd:ff:d7:dc       24%       6         42:12:01:3a:12:96       5%       6         b0:c5:54:bd:6c:e3       0%       11         12:62:2c:31:23:be       0%       11         00:e9:24:23:1:23:be       0%       11         reselected WIFI network is lower than 15%, the table, please select other available network or tween the device and router.
42:e9:dd:ff:d7:dc       15%       6         7c:4c:a5:d4:cc:39       34%       6         00:e9:dd:ff:d7:dc       24%       6         b0:c5:54:bd:6c:e3       0%       11         12:62:2c:31:23:be       0%       11         70:56:81:ce:28:05       15%       11         00:c5:2c:31:23:be       0%       11         re selected WFi network is lower than 15%, the table, please select other available network or tween the device and router.
7c:4c:a5:d4:cc:39       34%       6         00:e9:dd:ff:d7:dc       24%       6         42:f2:01:3a:f2:96       5%       6         b0:c5:54:bd:6c:e3       0%       11         12:62:2c:31:23:be       0%       11         70:56:81:0e:28:05       15%       11         00:62:2c:31:23:be       0%       11         be selected WiFi network is lower than 15%, the table, please select other available network or tween the device and router.
00:e9:dd:ff:d7:dc         24%         6           42:12:01:3a:f2:96         5%         6           b0:c5:54:bd:6c:e3         0%         11           12:62:2c:31:23:be         0%         11           00:62:2c:31:23:be         0%         11           00:62:2c:31:23:be         0%         11           b0:c5:4:e9:28:05         15%         11           b0:c6:2c:31:23:be         0%         11           be selected WiFi network is lower than 15%, the table, please select other available network or tween the device and router.
42:12:01:3a:12:96 5% 6 b0:c5:54:bd:6c:e3 0% 11 12:62:2c:31:23:be 0% 11 70:56:81:ee:28:05 15% 11 00:62:2c:31:23:be 0% 11 he selected WiFi network is lower than 15%, the table, please select other available network or tween the device and router.
b0:c5:54:bd:6c:e3         0%         11           12:62:2c:31:23:be         0%         11           70:56:81:ce:28:05         15%         11           00:62:2c:31:23:be         0%         11           he selected WiFi network is lower than 15%, the table, please select other available network or tween the device and router.         11
12:62:2c:31:23:be         0%         11           70:56:81:ce:28:05         15%         11           00:62:2c:31:23:be         0%         11           re selected WFi network is lower than 15%, the table, please select other available network or tween the device and router.         10
70:56:81:ce:28:05       15%       11         00:62:2c:31:23:be       0%       11         he selected WiFi network is lower than 15%, the table, please select other available network or tween the device and router.
100:62:2c:31:23:be 10% 111 1 he selected WIFI network is lower than 15%, the table, please select other available network or tween the device and router.
he selected WiFi network is lower than 15%, the table, please select other available network or tween the device and router.
manually:
SID) PLUSNET-KFMKQ3
d WPA2PSK \$
hm AES 🛊
Back Next
3 4 5 6 7
s ti d

Note: If the router you are looking for is not visible, click refresh to search again. If the router still does not appear the distance for the WIFI may be too far to connect with.

## WIFI Communication Set Up

Step 7	Enter the WIFI connection passw of the router. Click 'Next'	vord	Step 9	Click 'Next'	
Status Wizard Wireless	Please enter the wireless network password:	Help Please make sure you have entered the correct password	Status Wizard Wireless	Enhance Security You can enhance your system security by choosing th	e
Cable Advanced Upgrade Restart Reset	Password (8-64 bytes) (Note: case sensitive) Re-enter password	pusarra.	Cable Advanced Upgrade Restart Reset	following methods Hide AP Change the encryption mode for AP Change the user name and password for Web server Back Net	ר ר אxt
	Back Next 1 2 3 4 5 6 7			1 2 3 4 5 6	7
Step 8	Click 'Next'				
		Help	Step 10	Click 'OK' to complete the set	up.
Wizard Wireless Cable	Please fill in the following information:         Obtain an IP address automatically	Most systems support the function of DHCP to obtain IP address automatically. Please select disable and add it manually if your	Status Wizard Wireless	Setting complete!	Help After clicking OK, the system will restart immediately.
Advanced Upgrade Restart Reset	IP address     0.0.0.0       Subnet mask     0.0.0.0       Gateway address     0.0.0.0       DNS server address	router does not support such function.	Cable Advanced Upgrade Restart Reset	Click OK, the settings will take effect and the system will restart immediately. If you leave this interface without clicking OK, the settings will be ineffective.	
	Back         Next           1         2         3         4         5         6         7			Васк ОК 1 2 3 4 5 6 7	

Step 11

To check that the WIFI connection has pair correctly. Open WIFI settings> Connect to AP\_\*\*\*\*\* Network again> Open Browser Log back into 10.10.100.254 (step 3) > Check the status of the server is 'ping-able'

lus	Device information		
zard	Device serial number	502343444	
ireless	Firmware version	H4.01.43Y4.0.01W1.0.12(2014-07- 091)	
able	Wireless AP mode	Enable	
lvanced	SSID	AP_502343444	
grade	IP address	10.10.100.254	
start	MAC address	00:95:69:1A:59:34	
et Wireless STA mode	Wireless STA mode	Enable	
	Router SSID	PLUSNET-KFMKQ3	
	Signal Quality	60%	
	IP address	192.168.1.7	
	MAC address	00:95:69:1A:59:35	
	Cable mode	Disable	
IP address			
	MAC address		
	Connected Inverter		
	Remote server A	Pingable	
	Remote server B	Unpingable	
	Remote server C	Linningable	

#### Help

The device can be used as a wireless access point (AP mode) to facilitate users to configure the device, or it can also be used as a wireless information terminal (STA mode) to connect the remote server via wireless router.