# CBR2-S, M, L & XL

 
## **Condensing Unit Support Brackets "Type 2"** Installation instructions




Pump House Glaisdale Drive East Nottingham NG8 4LY Tel: 0115 900 5858

sales@pumph.co.uk www.pumph.co.uk





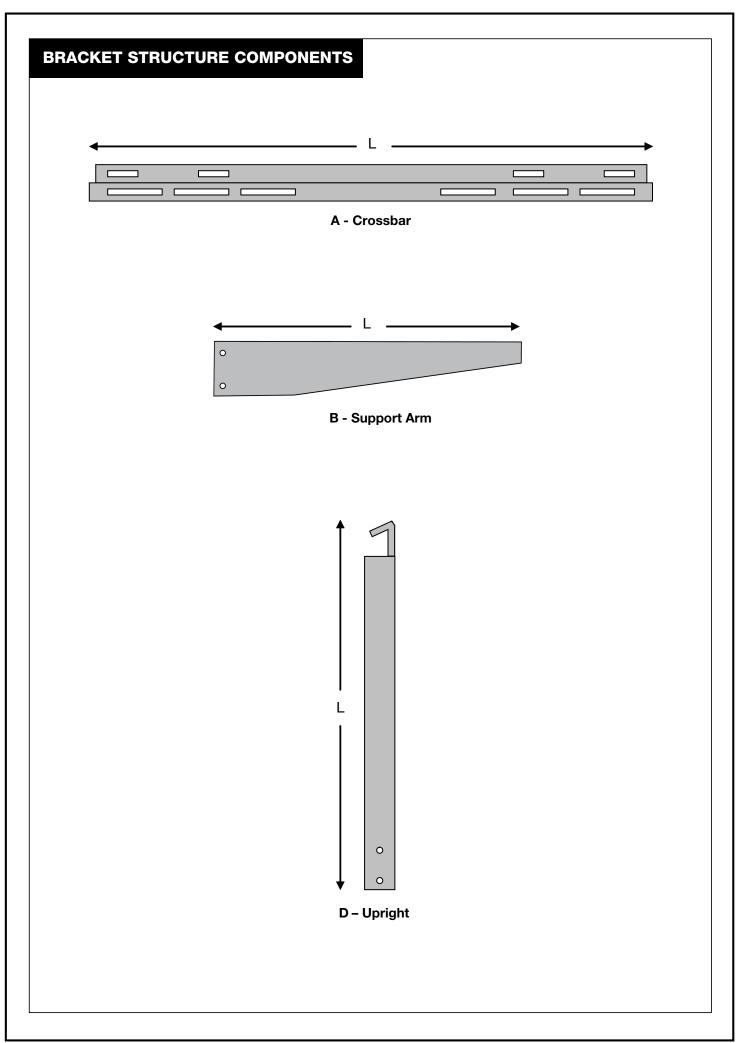

#### COMPONENTS

Pump House Condensing Unit Support Brackets are designed to support all leading brands of air conditioning condensing units and air source heat pumps, and have been independently tested and certified to the safe working loads, subject to the correct assembly and use of the product. Pump House accepts no liability for failure of this product where it has been assembled incorrectly or has been used for a function outside its intended application.

LIST OF COMPONENTS											
Item	Qty.	Description	Length, L (mm)								
		Description	CBR2-S		СВ	R2-M	CBR2-L	CBR2-XL			
Α	1	Crossbar	720		ç	900	1040	1040			
В	2	Support Arm	400		Ę	500	540	660			
D	2	Upright	400		Ę	500	550	550			
		-									
Е	4	M8 Wall-Fixing Bolts	J	8	2	25mm V	/asher				
F	4	M8 x 55mm Bolt	K	10	) N	//8 Nut					
G	4	M8 x 30mm Bolt	L	4	3	35mm Bolt Sleeve					
Н	2	M8 x 20mm Bolt	М	4	A	Anti-Vibration Washer		her			
I	12	20mm Washer	Ν	2	V	Wall-Spacer					

#### **INSTALLATION INSTRUCTIONS**

- 1. Mark and drill the wall with four suitably sized holes at locations corresponding to the fixing holes provided in the bracket crossbar (A).
- 2. Fix the crossbar (A) to the wall using 4 x wall-fixing bolts (E).
- Fit the support arms (B) to the uprights (D) using 4 x M8x55mm bolts (F), 8 x 20mm washers (I), 4 x M8 nuts (K) and 4 x bolt sleeves (L). The bolt sleeves are designed to prevent over-tightening of the bolts crushing the walls of the uprights and support arms.
- 4. Screw-in fully the wall-spacers (N) to the thread at the bottom rear of the uprights (B).
- Attach the uprights (B) to the crossbar (A) using 2 x M8x20mm bolts (H), 4 x 20mm washers (I), 2 x M8 nuts (K). The horizontal distance between the these fixing positions should be the same as the distance between the feet of the condensing unit.
- 6. Fix the feet of the condensing unit to the support arms (B) using 4 x M8x30mm bolts (G), 8 x 25mm washers (J), 4 x M8 nuts (K) and 4 anti-vibration washers (M).
- 7. Adjust the wall-spacers (N) to ensure that the condensing unit is supported in a horizontal position.
- 8. Sea salts are very corrosive and affect both ferrous and non-ferrous metals. Coastal installations are particularly at risk as they are frequently exposed to sea salt solutions followed by dry periods, where this wet/dry cycle produces a very corrosive environment.

We strongly recommend that in such locations only our stainless steel brackets are installed.

### CBR2-S, M, L & XL "Type-2" Installation Instructions

SPAN (	Type 2 Bra		Mode CBR2 CBR2 CBR2 View from abo	P-S	Maximum Safe Working Loac 60kg 90kg 140kg 250kg	
			×			
Dimensic	ons for span of cor		X			
Dimensic		ndensing unit feet		Denth	of Unit	
Dimensic	ons for span of cor	ndensing unit feet	of Unit	Depth Minimum (Y.)	of Unit Maximum (Y <sub>2</sub> )	
Dimensic	Model	ndensing unit feet	of Unit Maximum (X)	Minimum (Y <sub>1</sub> )	Maximum (Y <sub>2</sub> )	
Dimensic	Model CBR2-S	ndensing unit feet    Width   Minimum (X)   50mm	of Unit Maximum (X) 660mm	Minimum (Y₁) 25mm	Maximum (Y <sub>2</sub> ) 325mm	
Dimensic	Model CBR2-S CBR2-M	ndensing unit feet    Width   Minimum (X)   50mm   245mm	of Unit Maximum (X) 660mm 800mm	Minimum (Y,) 25mm 125mm	Maximum (Y <sub>2</sub> ) 325mm 425mm	
Dimensic	Model CBR2-S CBR2-M	ndensing unit feet    Width   Minimum (X)   50mm   245mm	of Unit Maximum (X) 660mm 800mm	Minimum (Y,) 25mm 125mm	Maximum (Y <sub>2</sub> ) 325mm 425mm	
Dimensic	Model CBR2-S	ndensing unit feet    Width   Minimum (X)   50mm	of Unit Maximum (X) 660mm	Minimum (Y₁) 25mm	Maximum (Y <sub>2</sub> ) 325mm	

#### **GUIDANCE ON INSTALLATION**

- 1. This product should be fitted by a competent installer of refrigeration air conditioning equipment or air source heat pump equipment
- 2. Pump House Condensing Unit Support Brackets are designed for use with all makes of condensing unit. Ensure that the bracket you have ordered is suitable for your condensing unit by referring to the safe working load and unit dimension tables.
- 3. The purpose of this product is to support refrigeration, air conditioning equipment or air source heat pump equipment onto external walls.
- 4. Ensure wall or building fabric is capable of supporting the load.

For further installation advice please call the technical support helpline on 0115 900 5858.